


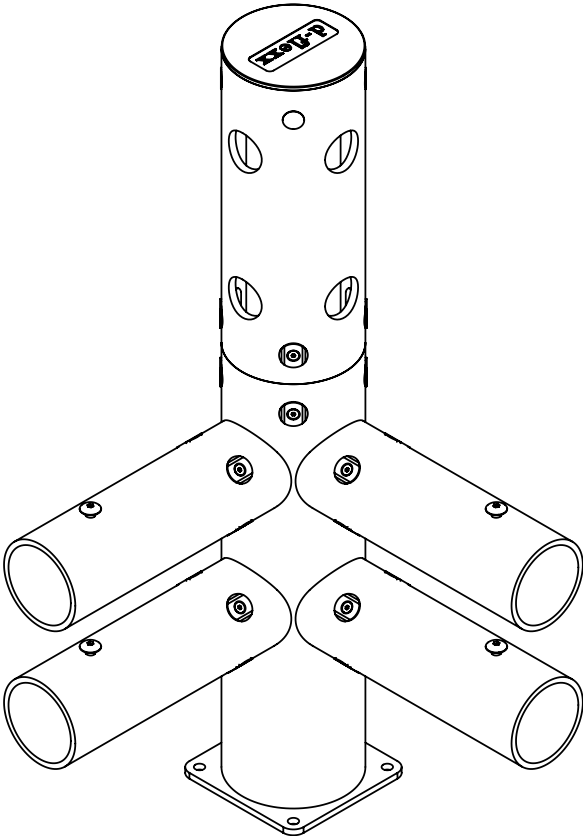


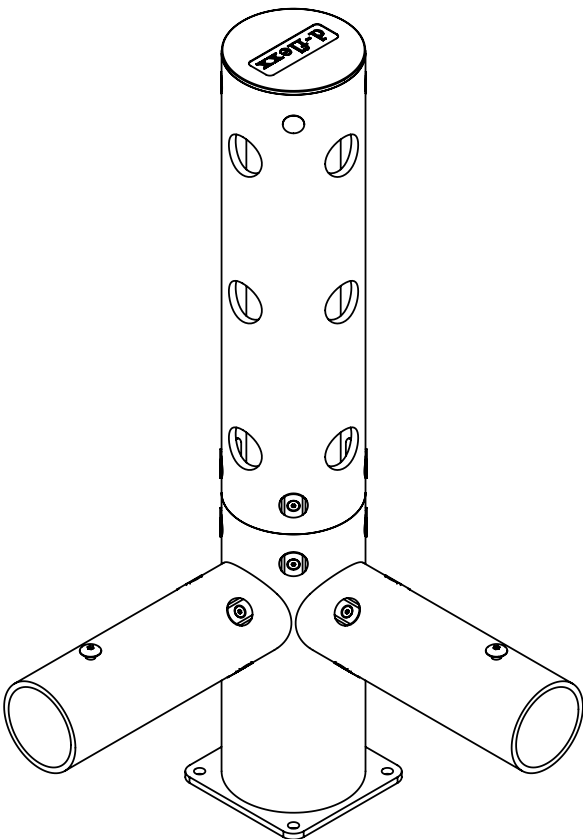

Assembly Guide


d-flexx CORNER POSTS

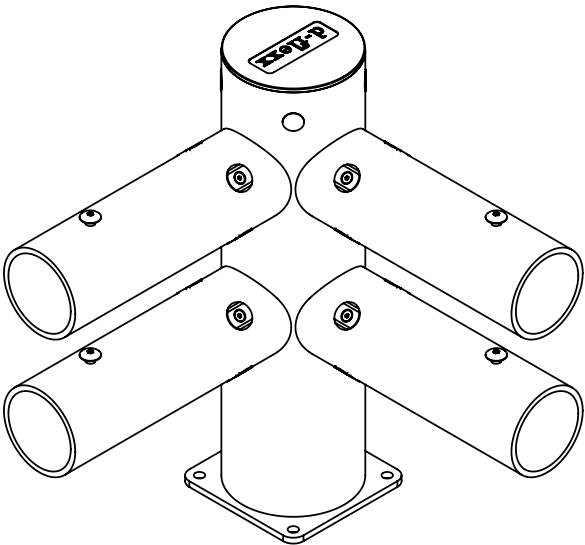

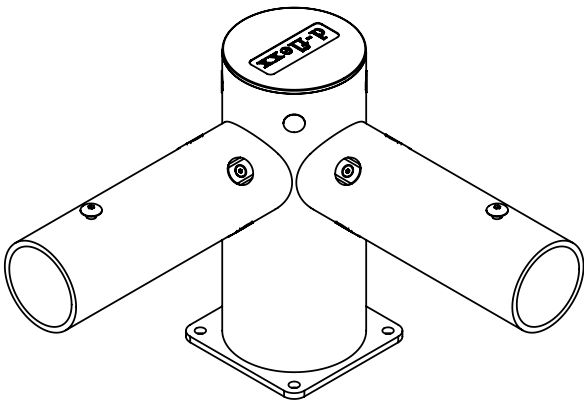


5mm
& 8mm

CHARLIE & HOTEL

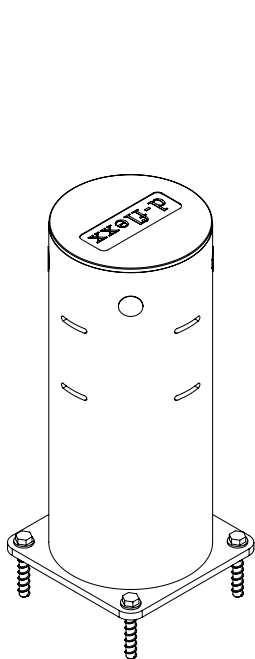

DFVB-M-W90
DFVB-M-W45
DFVB-M-T
DFVB-M-K

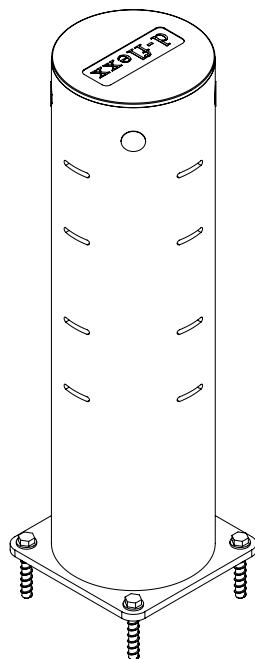


DFVBD-M-W90
DFVBD-M-W45
DFVBD-M-T
DFVBD-M-K



86011




72194




985.01-8




986.02-5



71058




71057

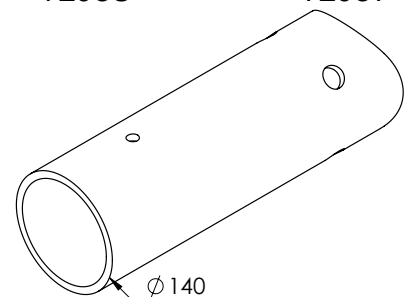


Ø 140

71059


1

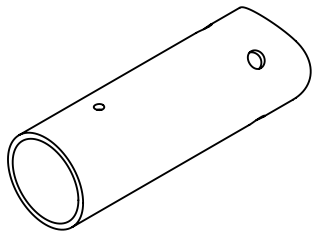


2

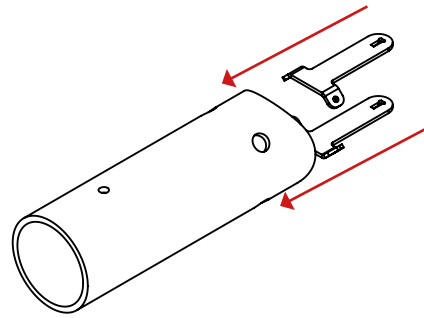


3

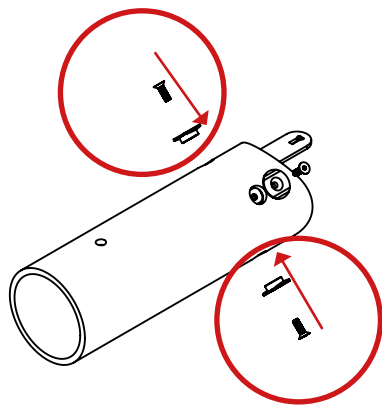


4

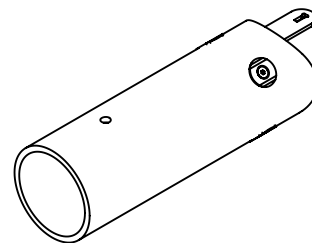


5

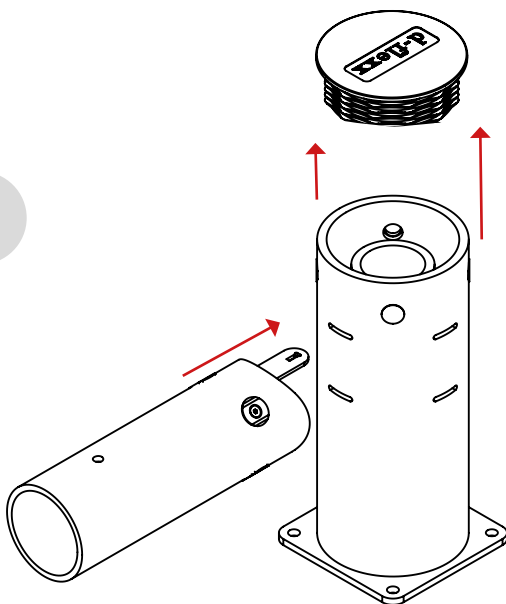



6

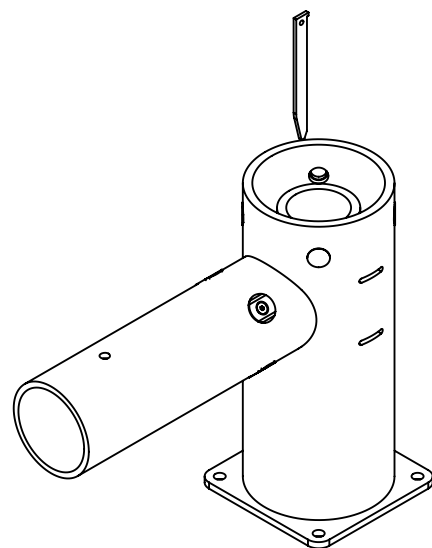


7

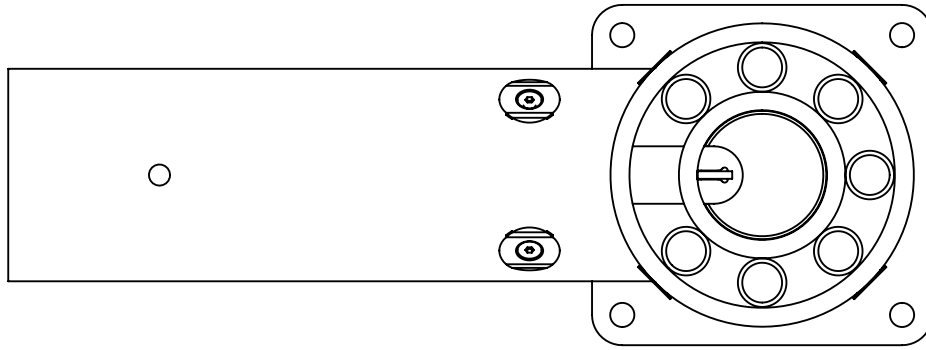


8

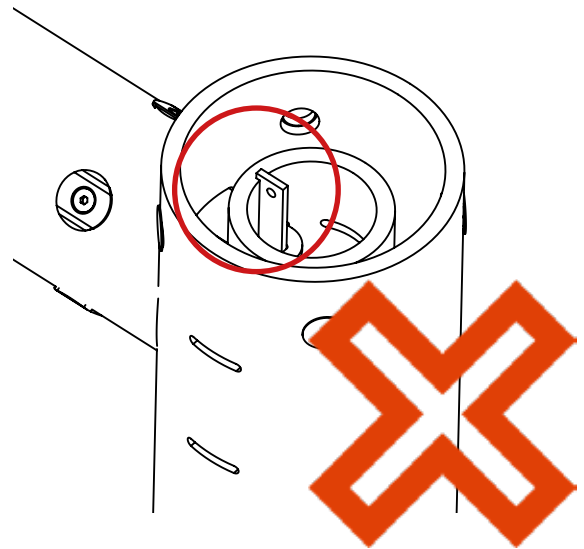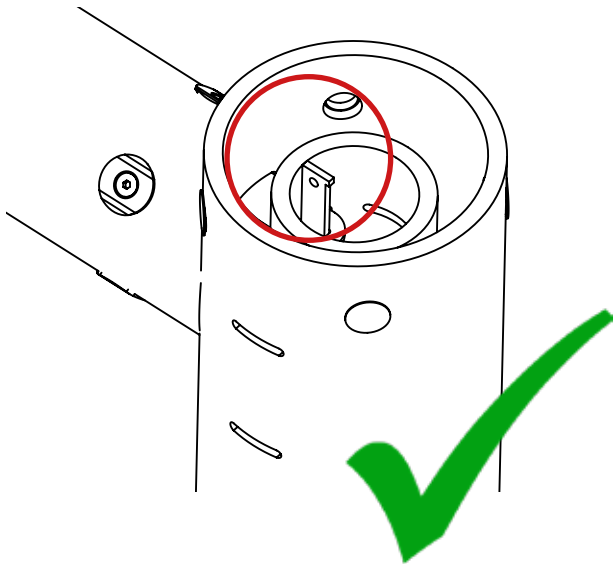



9

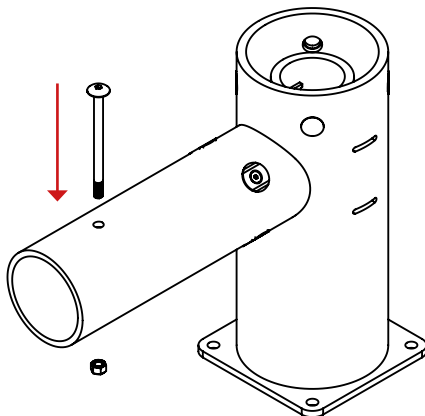

10

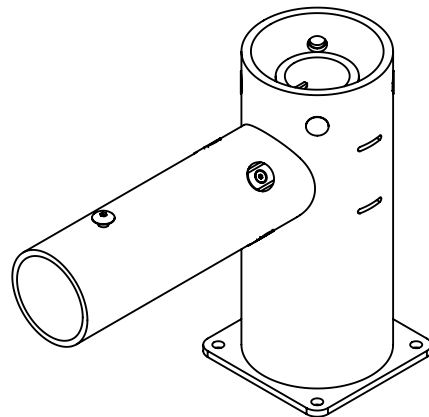


11

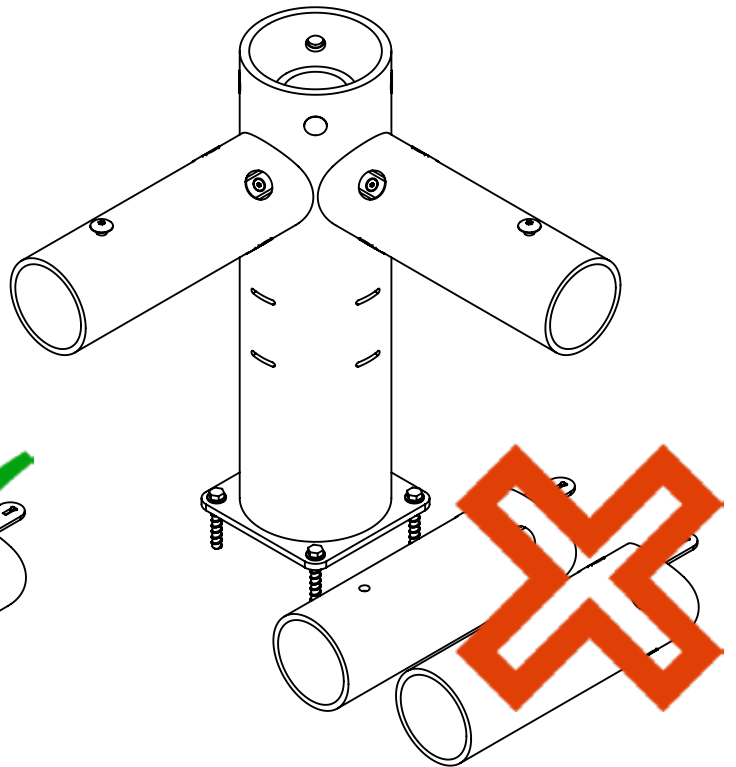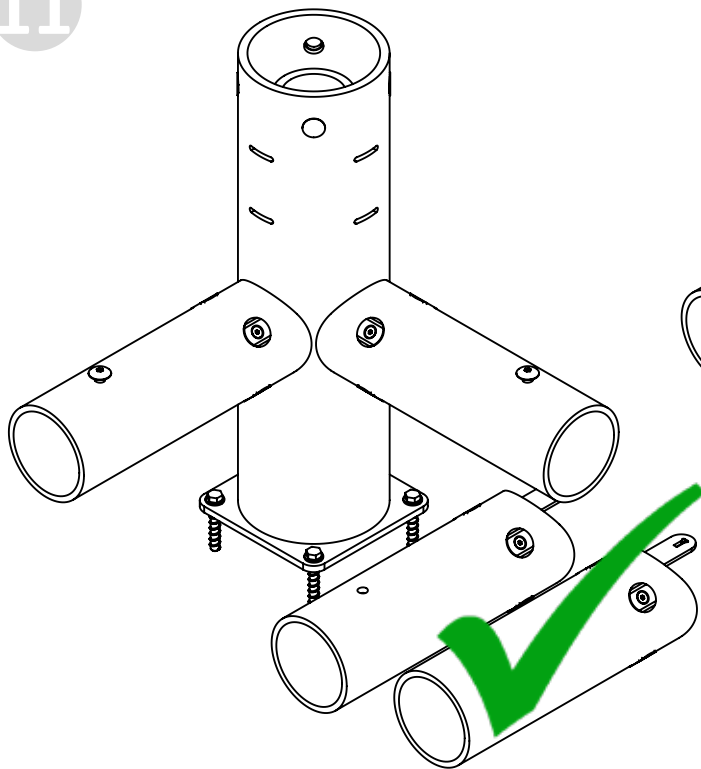

12




1 – 11

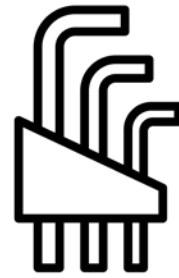

5mm
& 8mm

LIMA




81055



86011



72194




985.01-8



986.02-5




86011




86010




72194




71058




71057

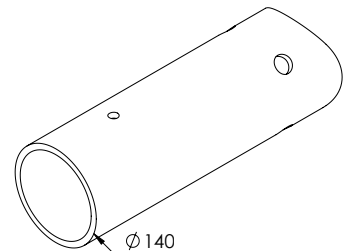


Ø 140
71059

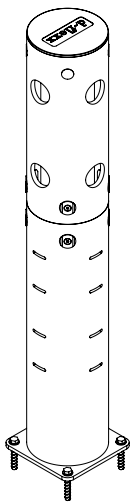

DFDH-M-W90
DFDH-M-W45
DFDH-M-T
DFDH-M-K












DFLI-M-W90+
DFLI-M-W45+
DFLI-M-T+
DFLI-M-K+

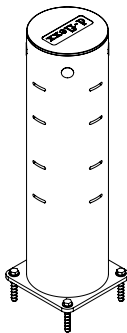


DFVBD-M-W90
DFVBD-M-W45
DFVBD-M-T
DFVBD-M-K

ECHO

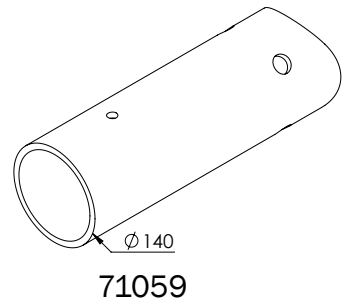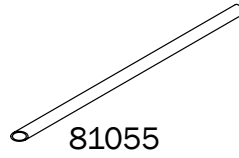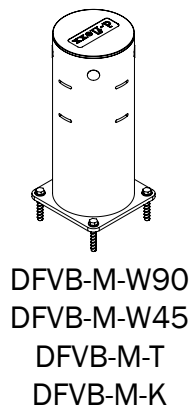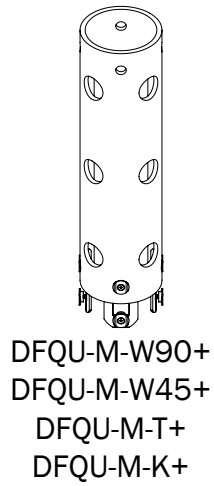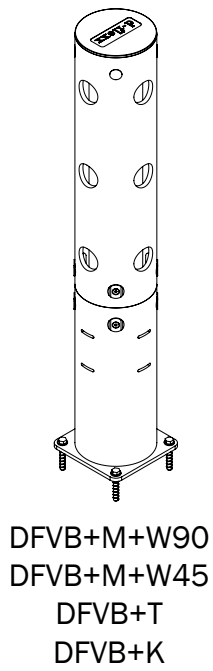

1

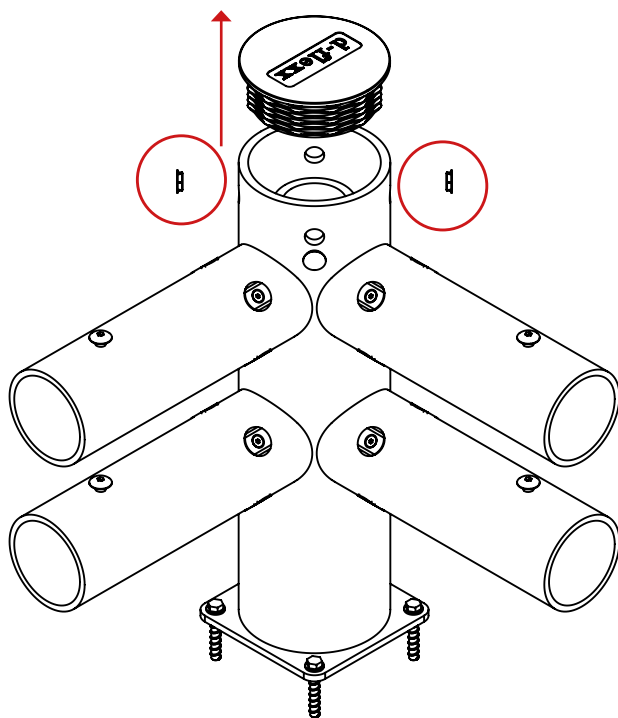

2

